

9070 Smart Vibration Meter Vibration analysis at the touch of a button

Analyze and Interprets readings...Incredible

performance at an unbelievably low price

Machinery Health Monitoring Tools from testproductsintl.com • 800.368.5719

BENEFITS

- ISO Built-in Alarms
- Easily identify bearing problems with BDU Reading
- Easily identify problems with built in band filters: 1X (unbalance)
 2X (misalignment)
 3X (looseness)
- 800 line FFT (spectrum)
- Ruggedized IP67 case
- 3-year Limited Warranty

FEATURES

- Full Color OLED Display
- Built-in accelerometer with stinger. Optional long stinger and magnetic mount available

MARKETS

- Commercial/Industrial HVAC
- Food Processing
- Manufacturing
- Mining
- Packaging
- Petrochemical
- Pulp and Paper
- Power Plants
- Utilities
- Automotive

data sheet

0.473 in/s


Overall machine and bearing conditions: vibration values are displayed with color coded alarm levels for ISO values and Bearing Damage (BDU).



Easy vibration analysis:

clear picture of machine problems detected with built in band filters:

- 1X (unbalance)
- 2X (misalignment)
- 3X (looseness)

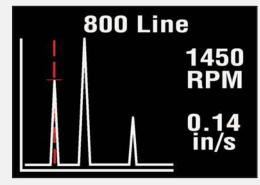

Identify complex issues:

800-line spectrum with zoom and cursor.



Photo Actual Size

Test the TPI Advantage



9070 Smart Vibration Meter

Machinery Health Monitoring Tools from testproductsintl.com • 800.368.5719

Stinger tip accelerometer with standard 1/4 x 28 threads. Various length stingers or magnets can be used

Full color high contrast OLED display



Environmental:o Water: IP67 Waterproof

o Operating: 32°F to 122°F (0C to 50C) o Storage: -4°F to 158°F (-20C to 70C)

• Power supply: 2xAA batteries

• Battery life: Approximately 50 hours of normal use

• Frequency ranges: 2/10Hz - 1kHz ISO 2Hz - 3kHz

• Frequency resolution: 100 / 200 / 400 / 800 lines

• **Displayed amplitude units:** Acceleration in g / velocity in inches per second or mm per second / Bearing damage in BDU

• Displayed frequency units: Hz, CPM or RPM

Input range: +/- 50 g
Dynamic range: 72 dB
Auto set up of VA bands

• Accelerometer connection: Internal sensor

Standard accessories

• Pouch with protective cap for pointed stinger

• Optional accessories:

o Magnet

Top button with circle:

- Press to power ON
- Press again to take a reading
- Auto OFF one minute after last reading, unless time OFF is changed in power time OFF in user settings

Left and right cursors:

- · Move curser in FFT mode
- Select set up in Menu mode

Menu Setup button:

- Press and it cycles through main big number screen, VA screen (Unbalance, Misalignment and Looseness)
- FFT, FFT zoom *2, FFT zoom *4, FFT zoom*8 and back to start.

Press and hold Setup Menu to set:

- ISO filter 2/10Hz
- ISO alarm level
- Units of measure: Metric/English
- Run speed (Metric defaults to 1500 CPM/English 1800 CPM)
- Frequency axis CPM (default) or Hz
- Screen brightness
- Power time OFF (programmable)

Left and right buttons select options and Menus accepts change

